



## CT100 BT Quick Guide

This Guide is intended for quick consultation only and does not replace the Use and Maintenance Manual. Before using the machine, read the Use and Maintenance Manual contained in the machine packaging thoroughly and rigorously respect all the instructions.

### PREPARATION/ OPERATION

1. Fill the detergent tank.



2. Release the parking brake by pressing the pedal downwards and to the left.



3. Release the emergency button to turn the machine on.



4. Insert the brushes under the head, making sure they rest against the aligners.



5. Hold the automatic brush attachment button down until they are attached.



6. Lower the squeegee using the lever.



7. Open/adjust the detergent tank tap.



8. Operate the drive lever. Pull it upwards to move the machine forwards, push it downwards to move the machine backwards.



9. Adjust the pressure of the brushes on the work surface using the button. The lit LEDs indicate the level of pressure.



10. Begin working.



11. When you have finished cleaning, proceed as follows:
  - Raise the squeegee.
  - Raise the machine head.
  - Press the emergency button.
  - Close the detergent tank tap.
  - Put the parking brake on by pressing the pedal downwards and to the right.
  - If necessary, charge the batteries.

### DAILY MAINTENANCE

Empty the dirty water drum through the drain hose and clean with water or water and detergent.



Check the suction filter is undamaged and clean.



Check the detergent tank fill filter is undamaged and clean.



Check the detergent output filter is undamaged and clean.



Clean the brushes.




Check the squeegee is clean and the blades are not damaged.



Check the battery charge.



To charge, insert the battery charger connector into the connector alongside the squeegee lifting lever.

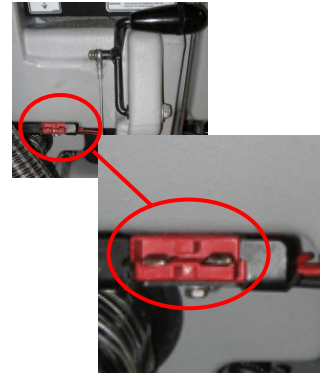

### REPLACING THE SQUEEGEE BLADES

- release the clip;
- remove the two blade retainers by pushing them towards the outside of the squeegee then extracting them;
- remove the blade;
- reuse the same blade by reversing the edge in contact with the floor until all four edges are worn out, or replace with a new blade, fitting it onto the screws on the body of the squeegee;
- reposition the two blade retainers by centring the widest part of the slots over the fixing screws on the squeegee body, then pushing the blade retainers inwards;
- fasten the clip.



### AUTOMATIC BRUSH ATTACHMENT

Attaching:

insert the brushes under the head, making sure they rest against the aligners. Hold the automatic brush attachment button down until they are attached.

Releasing:

lift the head using the lift button, then press the release button.



### TROUBLESHOOTING

<b>THE MACHINE DOES NOT COME ON/START UP</b>	CHECK THE EMERGENCY BUTTON IS NOT PRESSED
	CHECK THE BATTERY CHARGE
<b>THE SUCTION MOTOR DOES NOT WORK</b>	CHECK THE SQUEEGEE IS LOWERED IN THE WORKING POSITION
<b>THE MACHINE LEAVES THE FLOOR WET</b>	CHECK THE SQUEEGEE BLADES ARE NOT WORN
	CHECK THERE IS NO DEBRIS BETWEEN THE TWO SQUEEGEE BLADES
	CHECK THERE IS NO DEBRIS IN THE SUCTION HOSE
	CHECK THE SUCTION FILTER IS UNDAMAGED AND CLEAN
	CHECK THE DETERGENT TANK LID IS CLOSED CORRECTLY
<b>THE MACHINE LEAVES THE FLOOR DIRTY</b>	CHECK THE SUCTION HOSE IS CORRECTLY ATTACHED TO THE SQUEEGEE
	CHECK THE TYPE OF BRUSH/PAD IN USE IS SUITABLE FOR THE TYPE OF DIRT AND FLOOR.
<b>THE MACHINE LEAVES STRIPES OF WET FLOOR</b>	CHECK THE FLOOR HAS BEEN BRUSHED BEFORE USING THE MACHINE
	CHECK THERE IS NO DEBRIS BETWEEN THE TWO SQUEEGEE BLADES
	CHECK THE SQUEEGEE BLADES ARE NOT WORN
	CHECK THE SQUEEGEE IS CORRECTLY ADJUSTED